


QZBS-1816 QZSB-2522

Drop-In Kitchen Sink Installation Instructions and Templates

Las Instrucciones y Plantillas de Instalación de las Tarjas de Cocina de Sobreponer

- Tools Required:**
- Safety Glasses
 - Ruler/Tape Measure
 - Screwdriver
 - Masking Tape
 - Caulk
 - Drill
 - 1-1/4" Hole Saw
 - Saber Saw
 - (if counter top cutout is required)

- Herramientas Necesarias:**
- Regla/Cinta Métrica
 - Cinta Adhesiva Protectora
 - Calafateo
 - Taladro
 - Lentes de Seguridad
 - Destornillador
 - Sierra de Agujos de 1-1/4"
 - Sierra Sable (si se requiere recorte de la superficie del mostrador)

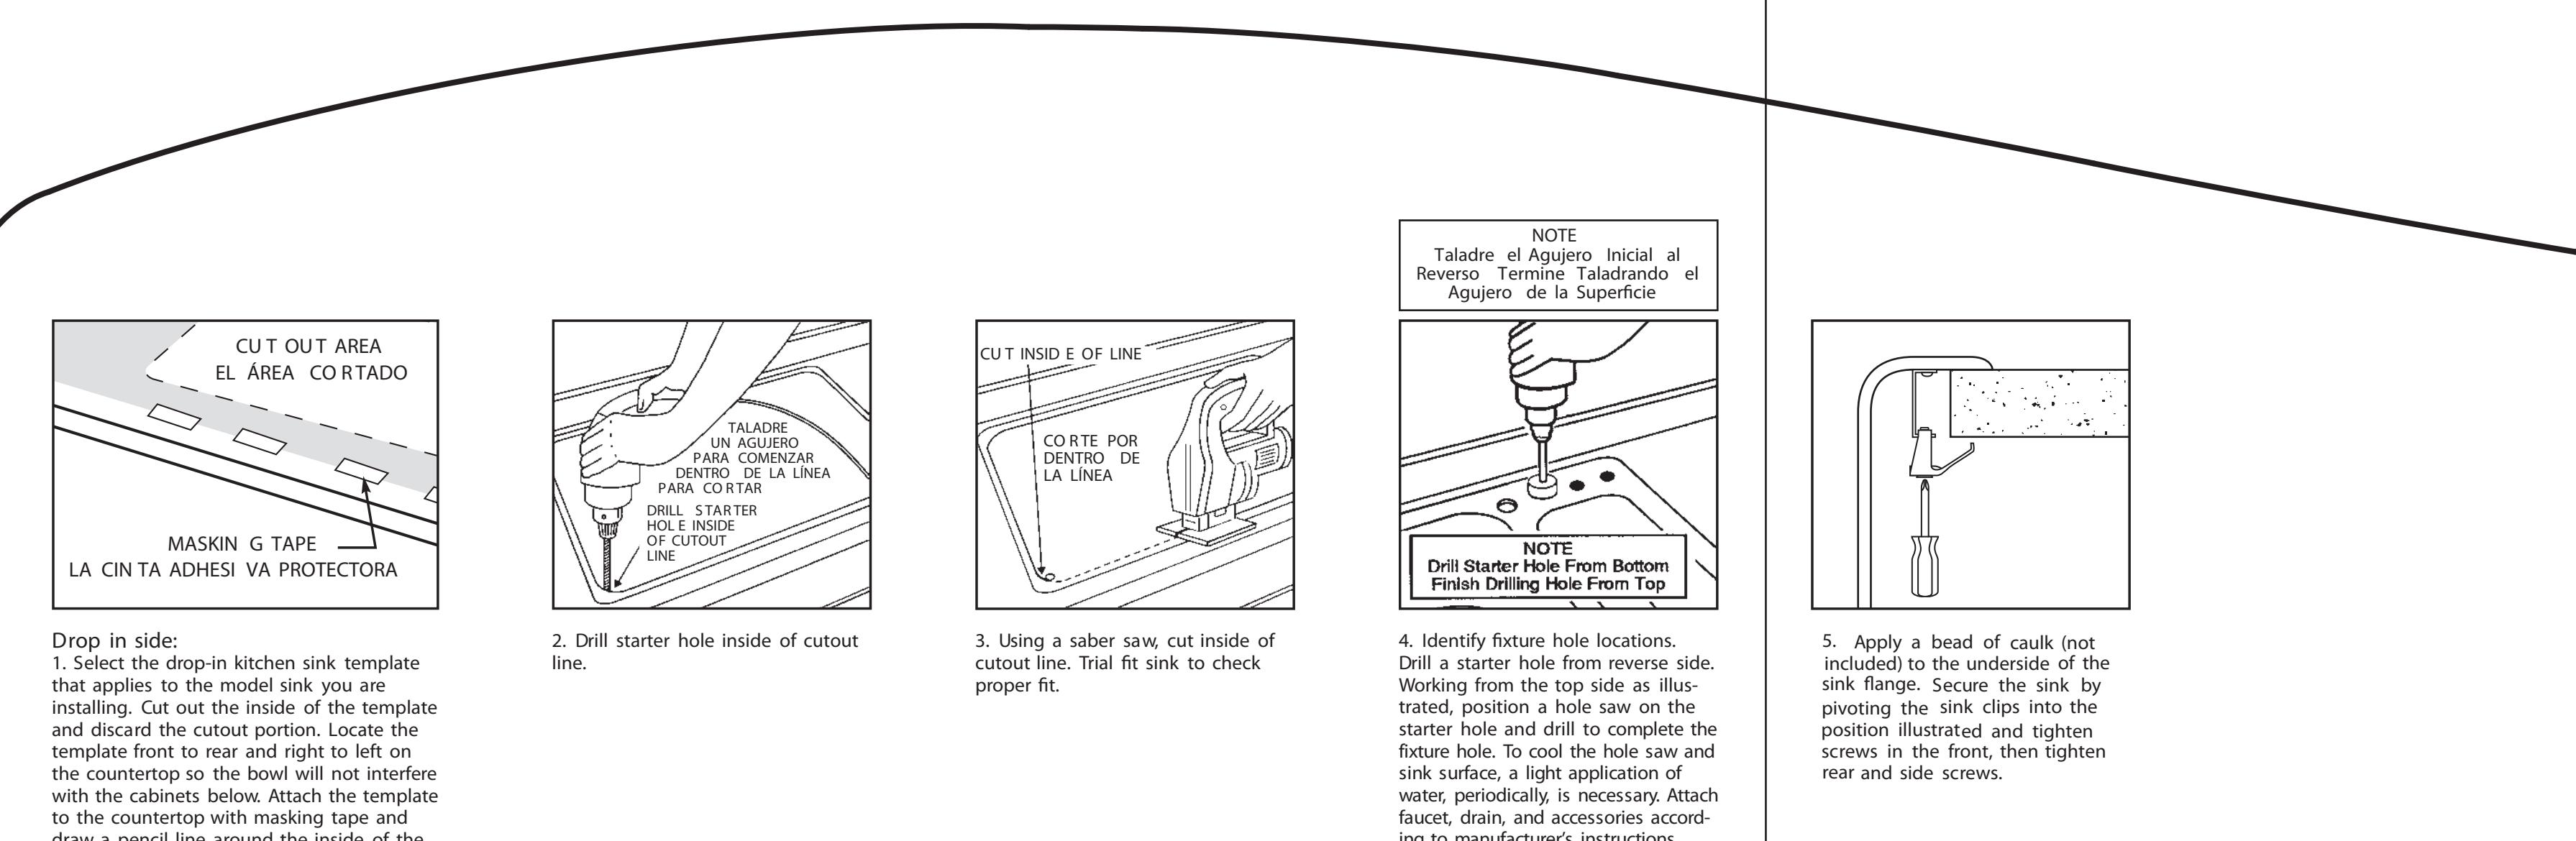

Visit swanstone.com
for care & cleaning instructions

FORM #880-01-11

QZES-3011

QZED-3322

QUED-3322

QZES-3011

Undermount Templates

Plantillas de Tipo Fijado Abajo



This template drawing accommodates the Overlap mounting option only.

Esta plantilla únicamente pertenece a la opción de Colocar Parcialmente Unos Sobre Otros.

These templates are for undermount installation only of models: QZSB-2522, QZDB-3322, QZLS-3322, QZAD-3322, QZBS-1816, QZES-3011, QUSB-2522, QUDB-3322, QULS-3322, QUAD-3322, QUED-3322, QZED-3322.

This procedure should be performed by a professional fabricator. If an undermount kitchen sink installation is desired, the template is to be used by a professional fabricator.


Visit swanstone.com
for care & cleaning instructions

QZSB-2522, QUSB-2522

QZBS-1816


QZDB-3322
QUDB-3322

QZLS-3322
QZAD-3322
QULS-3322
QUAD-3322

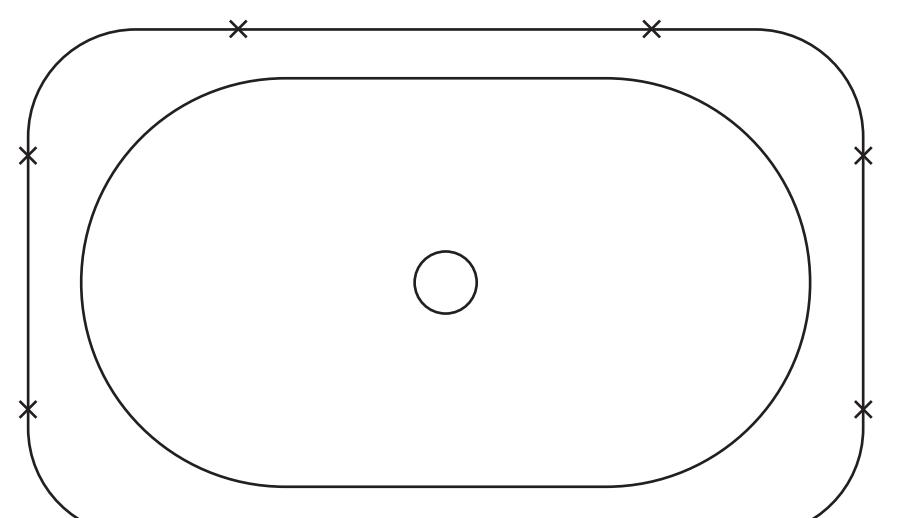


Undermount Installation Instructions

- On underside of top locate eight points around bowl approximately 1" from bowl flange. For a tighter installation, the use of all eight clips is recommended.
- Drill eight holes $\frac{1}{4}$ " x $\frac{1}{4}$ " at marked locations for brass inserts.
- Tap in brass inserts, slotted end first.
- Next, with bowl unit face up, clean top of bowl flange and underside of top around cutout with denatured alcohol.

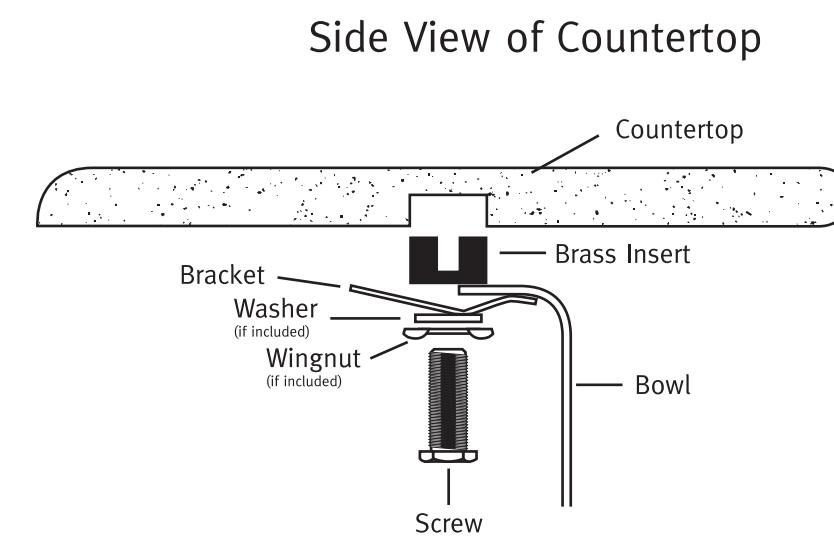


- Apply a narrow bead of silicone caulk to top inside edge of bowl flange and position bowl.
- Mount hardware by first threading wing nut (if included) well up on screw near the head. With washer (if included) and slotted clip in place, tighten screw securely to lock in brass insert.
- When bowl is correctly positioned over cutout, tighten wing nuts to secure bowl.
- Remove excess sealant from inside lip.

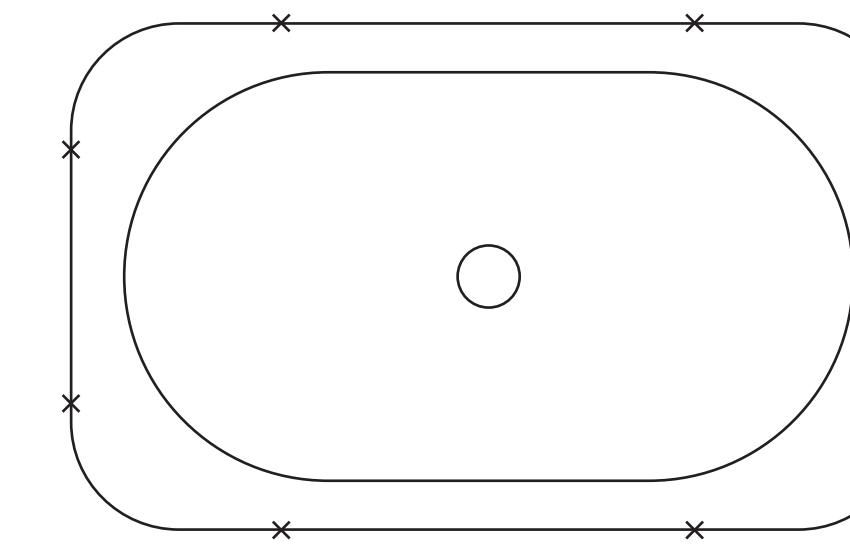

Las Instrucciones para la Instalación de Fijar Abajo

- En la parte inferior del mostrador, ubique los ocho puntos en los alrededores de la piletta, aproximadamente 1" del reborde de la piletta. Para una instalación más segura se recomienda el uso de todas las ocho grapas.
- Taladre ocho agujos de $\frac{1}{4}$ " por $\frac{1}{4}$ " a los puntos indicados para los entredos de latón.
- Golpee suavemente los entredos de latón, el extremo con ranura primero.
- Próximo con la piletta cara arriba, limpie la cara arriba del reborde de la piletta y la parte inferior de la parte arriba alrededor del recortado con el alcohol denaturado.

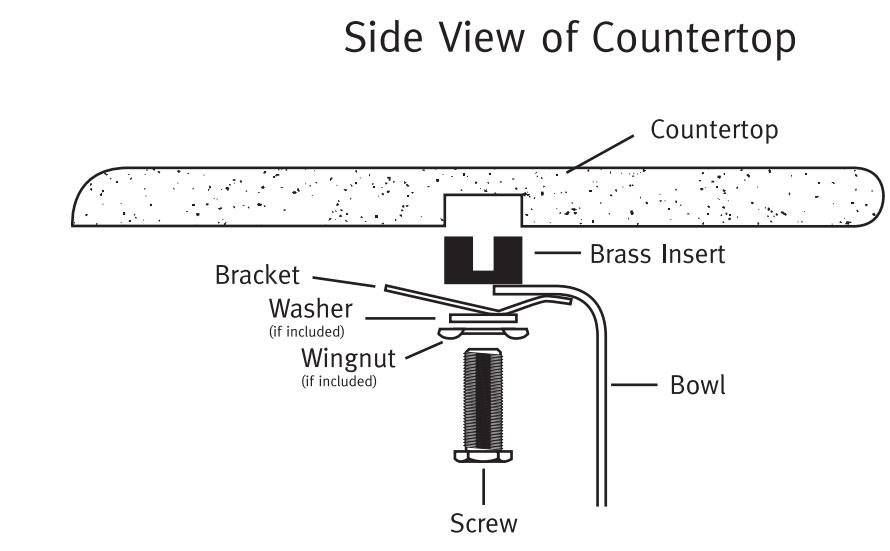

- Aplique una gota estrecha de calafateo de la silicona al borde interior del reborde de la piletta y coloque la piletta.
- Fije la ferrería primero por arrancar la tuerca (si se incluye) bien arriba del tornillo cerca de la cabeza. Con la arandela (si se incluye) y la grapa con ranura en posición, apriete bien el tornillo para dejar encerrado dentro del entredos de latón.
- Cuando se coloque correctamente la apriete las tuercas para sujetar bien la piletta.
- Quite la silicona excesiva del labio interior.

FORM #880-01-11